

Charger Safety Instructions

Your MeloYelo charger is a premium quality charger and you should not experience any issues with it.

Your AC (three pin) charger's input range is 100V – 240V.

Before charging: Connect the charger to your battery first, then connect it to your wall outlet and then switch it on.

After charging: Switch the outlet off and unplug your charger at the wall first, then unplug it from your battery.

Be aware:

- The charger is designed for indoor use only, do not expose it to rain or snow
- Do not wash your charger with water. Use a moist cloth.
- Disconnect equipment from power supply before cleaning.
- Do not cover your battery or changer while charging.
- Do not charge your battery around flammable materials.
- Do not attempt to open the charger.
- Leaving you battery in the bike while charging reduces the possibility of damage through dropping it.
- When disposing of your charger, try and dispose of it at an e-waste recycling facility.

Review Fire and Emergency NZ's safety tips for lithium ion batteries here.